

REFERENCE MANUAL
UNITIQUTE ALL-IN-ONE AUDIO PLAYER
ENGLISH

Contents

Section	Page	5	15
Contents			
1 UnifiQute Introduction	1		
1.1 The Integrated Amplifier	1	5.1 Selecting Inputs	15
1.2 The Multi-mode Radio	1	5.2 Volume Control	15
1.3 The UPnP™ Audio Interface	1	5.3 Amplifier Display	15
1.4 The USB/iPod Interface	1	5.4 Signal Outputs	15
		5.5 Amplifier Fault Warnings	15
2 UnifiQute Installation and Connection	2	6 UnifiQute Multi-mode Radio Tuner	16
2.1 UnifiQute Rear Panel	2	6.1 FM Tuner – Seeking Stations	16
2.2 Mains Power Connection	2	6.2 DAB Tuner – Seeking Stations	16
2.3 FM/DAB Aerial Connection	2	6.3 iRadio Tuner – Seeking Stations	16
2.4 Audio Signal Connections	2	6.4 Adding iRadio Stations	17
2.5 Speaker Outputs	3	6.5 Storing Radio Presets	17
2.6 Headphone Output	3	6.6 Using Radio Presets	17
2.7 Signal Ground Switch	3	7 UnifiQute UPnP™ Audio Interface	18
2.8 USB/iPod Interface	3	7.1 UPnP™ Servers	18
2.9 Network Connections	3	7.2 Audio File Compatibility	18
2.10 Control Socket	4	7.3 Scanning Servers and Playing Files	18
3 UnifiQute Operation	5	8 UnifiQute USB/iPod Interface	19
3.1 Front Panel Features	5	8.1 USB Media and File Compatibility	19
3.2 Front Panel Display (normal play mode)	5	8.2 iPod Compatibility and Charging	19
3.3 Front Panel Display (list mode)	6	8.3 Browsing and Playing USB Files	19
3.4 Front Panel Display (setup mode)	6	9 UnifiQute Specifications	20
3.5 UnifiQute Remote Handset	7		
3.6 UnifiQute Text Entry	8		
4 UnifiQute Setup	9		
4.1 The Setup Home Menu	9		
4.2 The Language Menu	9		
4.3 The Inputs Menu	9		
4.4 The Speakers Menu	10		
4.5 The Headphones Menu	11		
4.6 The Network Settings Menu	11		
4.7 The Digital Output Menu	12		
4.8 The Front Display Menu	12		
4.9 The Handset Keys Menu	12		
4.10 The Factory Settings Menu	14		

Note: This manual is issue No. 1 and describes the operation of units running software release version 3.0.00. The software running in a UnifiQute is displayed in the Factory Settings menu.

iPod, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. Windows Media is a trademark of Microsoft Corporation.

The “Made for iPod” logo indicates that this product has been designed specifically to work with iPod.



The manufacturer certifies that this accessory has been made in accordance with the high standards of quality and performance that you expect from iPod and Apple.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

UnitiQute Introduction

1 UnitiQute Introduction

UnitiQute is a highly capable product that will repay time and effort spent on installation and setup. We strongly recommend that you read this manual. UnitiQute effectively incorporates four separate elements. Each of these is introduced in the following paragraphs and subsequently described in full detail in Sections 5 to 8. The UnitiQute elements are:

An Integrated Stereo Amplifier	Introduced below and fully described in Section 5
A Multi-mode Radio	Introduced below and fully described in Section 6
A UPnP™ Audio Interface	Introduced below and fully described in Section 7
A USB/iPod Interface	Introduced below and fully described in Section 8

Prior to the sections describing UnitiQute's elements, Section 2 covers its installation and connection, Section 3 describes its operation and Section 4 describes its setup.

1.1 The Integrated Amplifier

1.1.1 Inputs

UnitiQute incorporates an audio preamplifier that provides two analogue and four S/PDIF digital audio external inputs. The preamplifier also accepts internal inputs from UnitiQute's integrated FM/DAB tuner.

In addition to conventional analogue and digital input signals, the UnitiQute preamplifier can accommodate the following external peripheral inputs:

- iPod and USB storage via a USB interface.
- Internet radio and universal plug and play (UPnP™) servers via an ethernet network socket or wireless network connection.

1.1.2 Signal Outputs

The UnitiQute preamplifier provides the following signal outputs:

- An S/PDIF digital audio output (pre volume/balance control).
- A preamplifier output (post volume/balance control).
- A headphone output (post volume/balance control).

1.1.3 Speaker Outputs

UnitiQute incorporates a stereo power amplifier rated at 30 Watts per channel into 8 Ohms. The power amplifier is designed to drive one pair of speakers via the sockets on the UnitiQute rear panel.

1.2 The Multi-mode Radio

The UnitiQute multi-mode radio combines an FM/DAB (Digital Audio Broadcasting) tuner and an internet radio (iRadio) player. A total of 40 radio stations across all three modes can be stored as presets. In FM and DAB mode stations are tuned by UnitiQute scanning the respective transmission bands. In iRadio mode UnitiQute receives data streams and a list of available radio stations from a dedicated internet server. iRadio requires broadband internet access via a home network connection.

The UnitiQute DAB module incorporates full broadcast and station display capabilities. The FM module is fully RDS (Radio Data System) capable.

Note: DAB and RDS broadcasts are not available in all territories.

1.3 The UPnP™ Audio Interface

UnitiQute can connect to a home network and play audio files stored on UPnP™ servers.

1.4 The USB/iPod Interface

UnitiQute incorporates a front panel USB interface socket that enables audio files stored on USB memory sticks and Apple iPod models to be selected and played.


UnitiQute Installation and Connection

2 UnitiQute Installation and Connection

UnitiQute should be installed on an equipment stand intended for the purpose. Do not stand it directly on top of another item of equipment and ensure it is well ventilated. Care should be taken to ensure that it is level. It should be installed in its final location before connecting cables or switching on. UnitiQute has no standby mode and is intended to be left switched on.

Connecting UnitiQute to mains power and to a variety of audio peripherals and sources is described in the following paragraphs. Diagram 2.1 illustrates the UnitiQute rear panel connection sockets.

2.1 UnitiQute Rear Panel

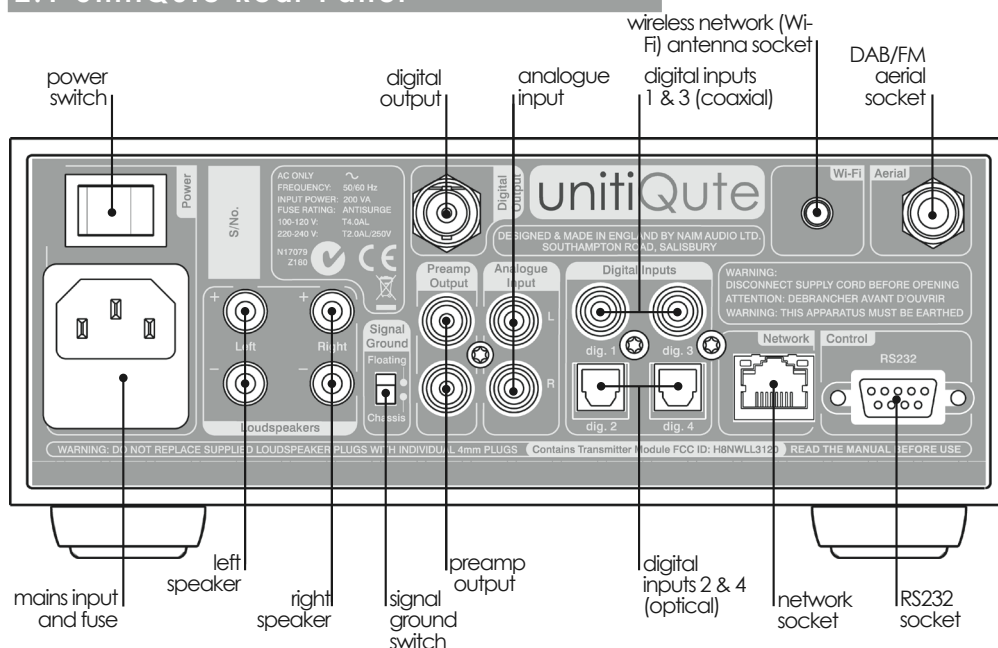

2.2 Mains Power Connection

Connect UnitiQute to a mains power socket using either the mains cable supplied or a Naim Power-Line.

2.3 FM/DAB Aerial Connection

In order to enable high quality FM and DAB radio, UnitiQute requires a, strong, interference-free radio signal. Its rear panel FM/DAB Aerial socket must be connected, via 75 Ohm low-loss coaxial cable, to a suitable aerial. The aerial should be mounted clear of large obstructions and as high as possible; ideally on a roof.

Note: Your local retailer should be able to offer advice on a suitable aerial and aerial installer.

2.4 Audio Signal Connections

2.4.1 Audio Signal Inputs

UnitiQute provides one USB input socket, two stereo analogue inputs and five S/PDIF digital inputs including one combined analogue/digital input socket. Connection to the inputs is made via a variety of socket types. The following table lists the inputs and their socket type:

Input	Type	Socket
rear panel	Analogue	RCA phonos
front panel	Analogue	3.5mm jack
	Digital	3.5mm mini-TosLink jack
dig. 1	Digital	Coaxial (RCA phono)
dig. 2	Digital	Optical (TosLink)
dig. 3	Digital	Coaxial (RCA phono)
dig. 4	Digital	Optical (TosLink)
USB	Digital	USB Type A

Note: The front panel analogue/digital jack socket can accept both conventional analogue 3.5mm plugs and mini-TosLink optical digital plugs. It will automatically identify the type of plug inserted and handle the signal appropriately.

Always use high quality interconnect cables to connect sources to UnitiQute inputs.

UnitiQute Installation and Connection

2.4.2 Audio Signal Outputs

UnitiQute provides audio signal outputs for a variety of applications. Connections to the outputs are made via the socket types listed in the following table:

Output	Type	Socket
Digital	Digital S/PDIF	75Ω BNC
Preamplifier	Analogue stereo	RCA phono

Note: The digital output is intended for connection to a digital to analogue converter or preamplifier incorporating digital inputs so that UnitiQute can be used as a digital source device for an existing system. The output can be switched on and off from a setup menu. See Section 4.7. External analogue inputs to UnitiQute are not available from the digital output.

Note: The digital output is taken before the UnitiQute volume and balance controls so the output signal will not reflect UnitiQute volume and balance control or mute function. The output always reflects the selected digital input signal.

Note: The preamplifier output is taken after the UnitiQute volume and balance controls so peripheral equipment connected to it will respond to UnitiQute volume and balance control changes. The output always reflects the selected input signal.

2.5 Speaker Outputs

A set of stereo speaker connection sockets is provided on the UnitiQute rear panel. Custom Naim Audio loudspeaker connectors are supplied to make the connection and in order to comply with current European safety regulations these should always be used. Naim Audio speaker cable will provide the best results, however, a range of speaker cable types may be used without risk of damage to the amplifier. Contact your local Naim retailer for further advice. Use equal lengths of speaker cable for each channel.

Ensure when connecting speakers that they are "in phase". That is, the positive and negative connection orientation at both the speaker and amplifier ends of the cable is the same for both channels.

2.6 Headphone Output

UnitiQute is fitted on its front panel with a 3.5mm stereo headphone socket. Insertion of a headphone plug will mute the speaker and preamplifier outputs.

Note: UnitiQute controls and stores volume settings separately for headphones and speakers.

2.7 Signal Ground Switch

UnitiQute is fitted on its rear panel with a **Signal Ground** switch offering two positions: **Chassis** or **Floating**. Select the **Chassis** position unless UnitiQute is connected in a hi-fi system incorporating another earthed source component, or mains "hum" is audible through the loudspeakers. Contact your retailer, distributor or Naim for advice if necessary.

Note: "Connected" in the context above means an analogue audio signal cable that includes an earth connection. The UnitiQute digital inputs and output are isolated from the mains earth regardless of the Signal Ground switch.

Note: All Naim CD players are earthed so the Signal Ground switch should be set to floating if one is connected in the system.

No damage will be done if the wrong Signal Ground position is chosen, however the system sound quality may be compromised.

Note: The UnitiQute negative analogue input and output connections for each channel are common. The mains earth (ground) should always be connected regardless of what other equipment is used. The mains earth primarily grounds the case and the electrostatic screen within the transformer, and is only connected to the signal negative if the Signal Ground switch is set to Chassis. In order to avoid hum loops, the signal negative of the whole system should be connected to the mains earth in one place only.

2.8 USB/iPod Interface

UnitiQute is fitted with a front panel USB interface intended for the connection of Apple iPod models and USB memory sticks carrying audio files. The USB interface should not be used for any other purpose.

Depending on the setup options chosen (see Section 4.3.5), iPod batteries will be charged when connected to the USB interface.

2.9 Network Connections

2.9.1 Wired Network Connection

UnitiQute is fitted on its rear panel with a standard RJ45 ethernet socket. This socket enables UnitiQute to join home networks via a network router to access internet radio data streams or to play audio files stored on appropriately configured UPnP™ servers.

Ethernet-over-mains hardware may be used and provides a simple and convenient method of wired home network connection. However, depending on mains wiring factors specific to each home environment, the presence of network data on the mains supply may compromise overall system sound quality. If any sound quality compromise is found to be unacceptable, dedicated network cabling should be installed or wireless networking should be employed.

UnitiQute Installation and Connection

2.9.2 Wireless Network Connection

If UnitiQute is to connect wirelessly to the home network the supplied Wi-Fi antenna must be fitted to the rear panel wireless antenna socket. Wireless configuration will also be necessary before UnitiQute is able to connect to the network. See Section 4.6.1 of this manual.

2.9.3 Network Settings

UnitiQute is set up when originally shipped not to require any on-site network configuration but to connect to a network automatically (it uses DHCP by default). However, if your UnitiQute has been previously used, its network configuration may have been altered leaving it unable to connect automatically. If this appears to be the case ensure that DHCP is selected in the Network Settings menu and re-start UnitiQute. If problems still persist contact your retailer, installer or Naim Audio directly. See Section 4.6.

Note: Before reporting network connection problems carry out a Factory Reset operation and try again. Select Reset All Settings from the Factory Settings setup menu. See Section 4.10.

Note: A UnitiQute switched on without a working wired network connection will only be able to connect to a home network wirelessly. To use an ethernet (wired) connection, switch UnitiQute off, connect the network and switch it on again.

Note: For internet radio to operate UnitiQute requires connection to a broadband internet service via a router/modem with a built-in firewall.

2.10 Control Socket


UnitiQute is fitted on its rear panel with a standard **RS232** interface socket. This socket is intended to enable firmware upgrades and diagnostic tests to be carried out. Contact your retailer, distributor or Naim for more information if required.

UnitiQute Operation


3 UnitiQute Operation

UnitiQute is operated from the supplied remote handset. Setting up and operating UnitiQute requires navigation through a menu-driven user interface. The general principles of the interface are carried across each of UnitiQute's elements so this section of the manual describes and illustrates those general principles.

3.1 Front Panel Features

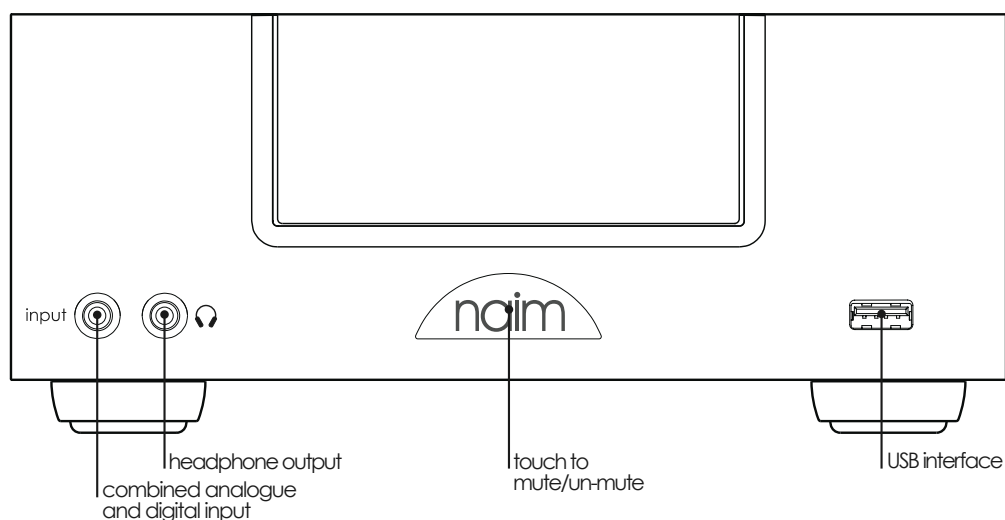

3.2 Front Panel Display (normal play mode)

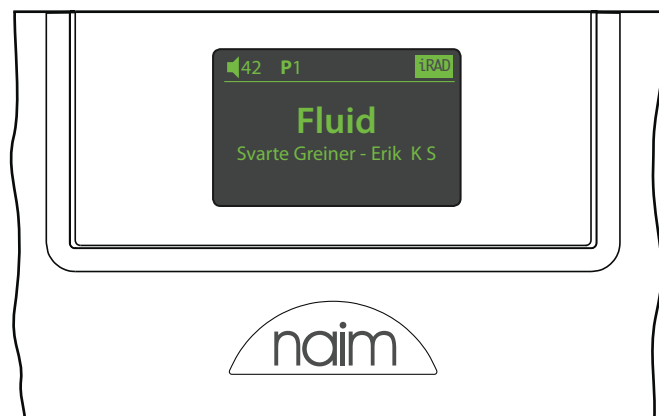

In normal play mode the UnitiQute screen provides a variety of information on the current setup, the input selected and the material playing. A typical normal play mode screen is illustrated above showing an **iRadio** station called **Fluid** playing programme by **Svarte Greiner**. The radio station has been saved as **Preset 1**.

At the top left of the screen volume level **42** is displayed along with a "**speaker**" icon that shows UnitiQute is not muted.

UnitiQute Operation

3.3 Front Panel Display (list mode)



List mode is entered by pressing the handset **ok/list** key and can be used where sources provide data that can be browsed: a list of radio stations or tracks for example.

Lists displayed will depend on the input selected and data available. A typical list mode screen is illustrated above showing the DAB radio stations available with BBC R1 selected.


At the top right of the screen, "1/28" denotes that the selected item is number one of twenty-eight.

To scroll up and down lists and select items use the handset **up** (▲) and **down** (▼) keys and **ok/list** buttons or keys. To return to normal display press the handset **exit** key.

Note: The right (▶) key duplicates the ok/list key when navigating list mode menus.

In long item lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

3.4 Front Panel Display (setup mode)

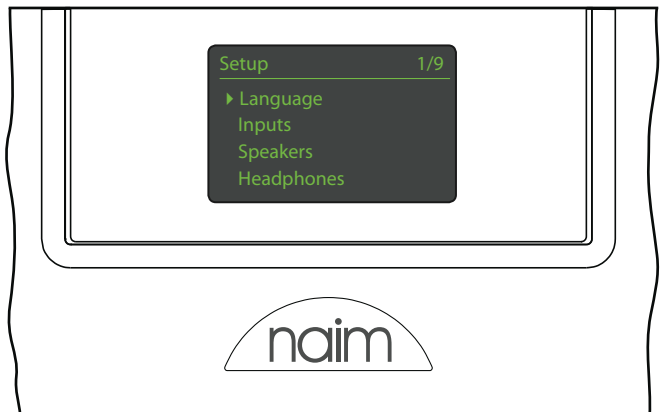

Setup mode is entered by pressing the handset **setup** (🔧) key. It provides access to all user-configurable UnitiQute parameters.

The screen illustrated above is the setup home screen that is always displayed when setup mode is entered. The "1/9" at the top right denotes that the selected item is number one of nine.

To navigate around the setup menus and make selections use the handset **up** (▲), **down** (▼) and **left** (◀) arrow keys to navigate around menus and the **ok/list** key to confirm a selection.

Note: The right (▶) key duplicates the ok/list key when navigating setup mode menus.

To exit setup mode press the **exit** key or **setup** (🔧) key.

UnitiQute setup is covered in Section 4.

Note: If programme material is playing when UnitiQute enters setup mode it will continue to play. The volume, mute and transport (play, pause, stop etc.) keys on the handset will remain operational.

UnitiQute Operation

3.5 UnitiQute Remote Handset

The supplied remote control handset is a multifunctional device designed specifically for Naim Uniti Series products.

To fit batteries, remove the battery cover and insert the batteries into the body taking care with their orientation. Replace the battery cover.

3.5.1 Normal and List/Setup Mode Keys

Key	Normal Mode	List/Setup Modes
Numeric text	Enter digits 1 to 9	Enter letters in text
0 └─	Enter 0 (zero)	Enter spaces in text
preset del	Display the radio preset list	Delete last letter in text
store ↑	Display the radio preset menu	Switch text case
input+ ▲	Select next input	Menu up navigation
input- ▼	Select previous input	Menu down navigation
◀	Input dependent (see note)	Previous menu or back one character in text
▶	Input dependent (see note)	Next menu or forward one character in text
exit	No function	Exits current menu without saving changes
list ok	Display input dependent list of tracks/functions	Confirm action or selection

Note: Navigation (◀ ▶ ▲ ▼) key assignments can be altered via the Handset Keys setup menu. See Section 4.9.



The handset key functions are listed and described in the tables below. Some keys change function when UnitiQute is in list/setup mode. Normal play mode functions are denoted by the text on each key and list/setup mode functions are denoted by the text below each key. Keys with only one function are listed in the table on the right.

3.5.2 Normal Play Mode Keys

Key	Function
disp	Switches UnitiQute display on or off
vol +	Increase volume
vol -	Decrease volume
mute	Silences UnitiQute
repeat	Repeat selected track, programme or playlist
shuffle	Play tracks randomly from list
setup	Display the setup menu
info	Cycle through secondary input information
play/pause	Play or pause track
previous	Go to previous track/station
next	Go to next track/station
stop	Stop track
reverse	Fast reverse track
forward	Fast forward track
cd	Selects the rear panel Analogue input
radio	Sequentially selects the FM, DAB and iRadio inputs
pc	Sequentially selects the UPnP™ and USB/iPod inputs
iPod	Sequentially selects the USB/iPod and front panel inputs
tv	Selects the Digital 1 input
av	Selects the Digital 2 input
hdd	Selects the Digital 3 input
aux	Selects the Digital 4 input

Note: Input selection key assignments can be altered via the Handset Keys setup menu. See Section 4.9.

3.6 UnitiQute Text Entry

Some UnitiQute menu screens require text entry - naming inputs for example. Text entry is carried out using the handset numerical buttons in a manner similar to mobile phone SMS text entry.

When text entry is required, multiple presses of a key will scroll through the characters associated with that key. In addition to characters, the **preset** key provides a **delete** function, the **zero** key provides a **space** and the **store** key provides letter **case** change. The **up** (▲) and **down** (▼) keys will also scroll through all the available letters.

The enlarged handset image illustrates the number keys and the characters associated with each.

When prompted on a UnitiQute screen to enter text, select characters in turn by pressing each appropriate key the required number of times. Confirm the text entry by pressing the **ok/list** key.



UnifiQute Setup

4 UnifiQute Setup


Once UnifiQute is installed with mains power, speakers, a radio aerial and any external input connections made, it can be switched on and set up for use.

The degree to which you modify UnifiQute's default settings will depend upon the uses to which you put it and the extent to which you use its capabilities. It may be that you have no need to modify the default settings at all, however we would encourage you to read this section of the manual in order that you gain a full understanding of UnifiQute's abilities. The following paragraphs describe each UnifiQute setup menu in turn starting with the setup home menu.

Enter UnifiQute setup mode by pressing the handset setup (🔧) key. Navigate around the setup menus using the handset arrow keys and make selections using the ok/list key. Exit setup by pressing the exit key.

4.1 The Setup Home Menu

The UnifiQute setup home menu provides access to nine setup menus. The function of each menu is as follows:

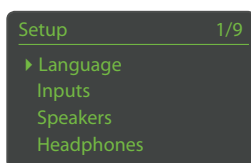

- Language:** Enables the UnifiQute user interface language to be changed.
- Inputs:** Enables various parameters for each internal and external input to be configured.
- Speakers:** Configures UnifiQute speaker output options.
- Headphones:** Configures UnifiQute headphone output options.
- Network Settings:** Configures UnifiQute network connection settings.
- Digital Output:** Configures UnifiQute digital output settings.
- Front Display:** Configures UnifiQute display features.
- Handset Keys:** Enables UnifiQute inputs to be assigned to specific handset keys. Also enables configuration of the handset navigation (◀ ▶ ▲ ▼) keys.
- Factory Settings:** Enables interrogation of UnifiQute status, deletion of all user presets and return to factory default settings.

Each of the eight setup menus is described in detail in the following sections. Use the handset **up** (▲) and **down** (▼) and **ok/list** keys to select a setup menu.



4.2 The Language Menu

The Language setup menu enables the UnifiQute user interface language to be changed. Enter setup mode and use the handset **ok/list** key to select **Language**. Use the handset **up** (▲) and **down** (▼) and **ok/list** keys to select a language. Exit setup mode by pressing the handset **exit** key.



4.3 The Inputs Menu

The Inputs setup menu enables a variety of parameters to be specified for each UnifiQute internal source and external input. These parameters define how control of UnifiQute inputs behaves. The options available for each are described in the following sections. Three parameters are common to all inputs:

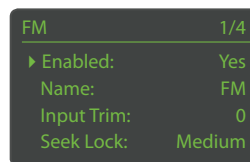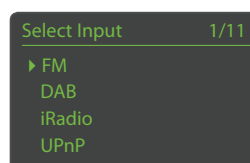


Enabled: Switches the input on or off and displays or hides any associated menus.

Name: Enables user specified names to be attached to inputs. Use the handset to enter text.

Input Trim: Enables the relative level of each input to be adjusted so that each is of an approximately equal volume. Adjust using using handset ▼ or ▲ key.

4.3.1 FM Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
Seek Lock:	Low / Medium / High. Sets the FM signal strength required for the UnifiQute tuner to identify an FM station.

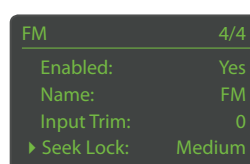

UnitiQute Setup

4.3.2 DAB Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
Re-scan Stations:	Re-scans for DAB stations.

DAB	4/4
Enabled:	Yes
Name:	DAB
Input Trim:	0
▶ Re-Scan Stations	

Note: The UnitiQute DAB input is not implemented in units distributed in territories where Digital Audio Broadcasting is unavailable.

4.3.3 iRadio Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
Browse History:	Yes / No. If

iRadio	4/4
Enabled:	Yes
Name:	iRadio
Input Trim:	0
▶ Browse History: No	

Yes is specified UnitiQute will select the last used station if it is available. If **No** is specified UnitiQute will display the full list of available stations.

4.3.4 UPnP™ (Network) Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB

UPnP	3/3
Enabled:	Yes
Name:	UPnP
Input Trim:	0
▶ Restore History	

4.3.5 USB/iPod Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
Folder History:	Yes / No. If Yes

USB/iPod	4/5
Enabled:	Yes
Name:	USB/iPod
Input Trim:	0
▶ Folder History: No	

is specified UnitiQute will automatically display the last used folder on the USB device. If **No** is specified the top level folder of the device will be displayed.

iPod Charging: Always / Never / Auto. iPod battery charging takes place **always** when the iPod is connected, **never** takes place, or **automatically** when the iPod is connected and an alternative input is selected.

Note: The option not to charge is offered because there is a reduction in iPod sound quality when simultaneously charging and playing. This means however that an iPod can potentially run out of power while playing.

4.3.6 Front Panel Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
Format:	Auto / Analogue

Front	4/4
Enabled:	Yes
Name:	Front
Input Trim:	0
▶ Format: Auto	

/ Digital. If **Auto** is specified the front panel input will automatically detect the audio signal format (analogue or digital) and configure the input appropriately. Specifying **Analogue** or **Digital** will fix the front panel input format.

4.3.7 Rear Panel Digital Inputs

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB

Digital 1	1/3
Enabled:	Yes
Name:	Digital 1
Input Trim:	0

4.3.8 Rear Panel Analogue Input

Parameter	Options
Enabled:	Yes / No
Name:	User definable
Input Trim:	±4dB
AV Fixed Volume:	Yes / No

Analogue	1/4
Enabled:	Yes
Name:	Analogue
Input Trim:	0
AV Fixed Volume:	No

If **No** is selected the input will behave normally. If **Yes** is selected the input will operate at maximum volume and the UnitiQute volume control will be disabled. This enables UnitiQute to be used in multi-channel AV systems with volume control handled by the AV processor. **Take care when selecting AV Fixed Volume.**

4.4 The Speakers Menu

The Speakers setup menu enables a variety of speaker parameters to be adjusted. The options are tabulated and described in the following sections:

Parameter	Options
Type:	Large / Small / None
Loudness:	Yes / No
Max. Volume:	0 to 100 (adjust using handset ▼ or ▲ keys)
Balance:	-10 to +10 (adjust using handset ▼ or ▲ keys)

Speakers	1/4
Type:	Large
Loudness:	No
Max. Volume:	100
Balance:	0

The speaker **type** options specify high-pass filtering settings.

Select the **Large** option when the UnitiQute preamplifier output is connected to an external power amplifier or to a subwoofer used to augment the low frequency performance of large (full bandwidth) speakers.

Select **Small** only when the UnitiQute preamplifier output is connected to a subwoofer used to provide the low

UnitiQute Setup

frequency component of a speaker system incorporating small (restricted bandwidth) satellite speakers. When Small is specified, a 100Hz high-pass filter is applied to the UnitiQute speaker output signal.

Select **None** when no speakers are connected directly to the UnitiQute

Engaging the **Loudness** option applies low frequency boost to the speaker and preamplifier outputs that decreases as the volume setting is increased. Through compensating for the ear's reduced low frequency sensitivity at low volume levels, the Loudness function can make low volume listening more satisfying.


Note: The loudness contour operates at volume settings between 0 and 55.

The speaker **Max. Volume** and **Balance** parameters specify maximum allowed volume, and the channel balance respectively.

4.5 The Headphones Menu

The Headphones setup menu enables the **Max. Volume** parameter to be specified:


Parameter	Options
Max. Volume:	0 to 100 (adjust using handset ▼ or ▲ keys)

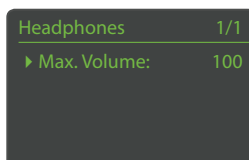

4.6 The Network Settings Menu

The Network Settings menu enables UnitiQute network parameters to be customised to suit the router and network. The options are tabulated and described in the following sections:

Parameter	Options
Name:	User definable (text entry) Default: Uniti-xxxx
Wireless:	Not Used / Wireless Network Names
Status:	Connected / No Signal / Login Failure / Busy / Etc.
DHCP:	Yes / No

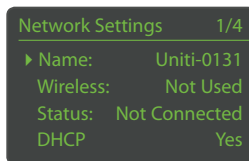

The **Name** parameter enables the UnitiQute's default network name to be changed.

The **Wireless** parameter enables a wireless network to be chosen and joined. See Section 4.6.1 below for detailed wireless set up notes.

Network **Status** displays the current network connection status.

The **DHCP** parameter enables the UnitiQute network settings to be modified. In most cases, specifying **Yes** and leaving UnitiQute set to DHCP, will be the appropriate


option. See Section 4.6.2 below for notes on non-DHCP network connection.

Note: Devices installed on a network have an IP address through which they are identified by all the other items on the network. DHCP is a set of rules that enable the automatic allocation of addresses as items are connected (or switched on while connected) to the network. UnitiQute is set up by default to use DHCP.

Note: If UnitiQute is connected to the network both wirelessly and via ethernet (wired), the ethernet connection will take priority.

4.6.1 Wireless Network Connection Set Up

If the **Wireless** parameter is selected in the Network Settings menu the Select Network menu will display a list of the available networks. An option not to use a wireless connection is also provided. Use the handset **up** (▲) or **down** (▼) keys to scroll through the list and the **ok/list** key to select a network.

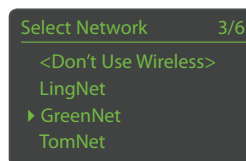


Note: UnitiQute is compatible with most commonly used Wi-Fi standards. Routers that support 802.11b and 802.11g will work, however those with 802.11g compatibility are recommended for best results.

Note: As with any wireless network hardware, UnitiQute connection reliability will be affected by both network router performance and Wi-Fi signal quality. To minimise the possibility of poor connection reliability, UnitiQute should be connected to network audio sources by no more than one wireless "leg". Other "legs" necessary between UnitiQute and the network audio sources should be wired.

Note: UnitiQute cannot connect to a "hidden" wireless network.

If the selected network is secure and requires a passphrase or access key to join, UnitiQute will display an alert message. Pressing the handset **ok/list** key will then open a text entry screen for entry of the passphrase or access key.

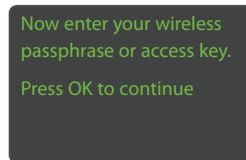

Use the handset **numeric/text** keys to enter the passphrase or access key taking care to ensure that the letter case is correct. Press the handset **ok/list** key when text entry is complete. In the illustration the passphrase is "flatfish".



If the network is successfully joined UnitiQute will display a confirmation screen.



UnitiQute Setup

If an incorrect passphrase or access key is entered UnitiQute will display an alert message.

Note: As a security measure, a router may also require the UnitiQute's MAC address to be entered before allowing it to join the wireless network. This type of security feature is known as 'MAC address filtering'. The UnitiQute MAC address is shown in the 'Factory settings > System Status' page.



Note: The wireless passphrase/access key is created when the wireless router is first set up and could be a word or a series of numbers and letters. If the passphrase/access key is not known, check on the router settings page or with the person who initially set up the router.

Note: If a router offers multiple security configurations, UnitiQute will automatically offer only the most secure one.

Note: If WEP security is used the router should be set to "auto" or "open" authentication.


If the selected network is insecure and requires no passphrase or access key to join, UnitiQute will display an alert message. Pressing the handset **ok/list** key will immediately connect UnitiQute to the network and display a confirmation screen.

Note: Wireless connection difficulties can sometimes be resolved by changing the wireless connection channel in the router settings.

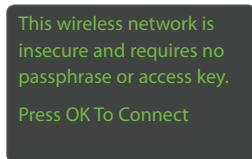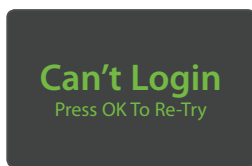

4.6.2 Non-DHCP (Static) Network Connection

If **DHCP** is de-selected in the Network Settings menu, five further parameters will be displayed.

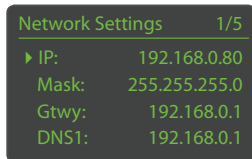


Parameter	Options
IP:	User definable (numerical entry) Default: 192.168.0.80
Mask:	User definable (numerical entry) Default: 255.255.255.0
Gateway (Gtwy):	User definable (numerical entry) Default: 192.168.0.1
DNS1:	User definable (numerical entry) Default: 192.168.0.1
DNS2:	User definable (numerical entry) Default: 192.168.0.1

These settings enable UnitiQute to connect to a network using a fixed IP address. On selecting each one in turn, numerical entry screens will be displayed that require completion with the appropriate network IP address

settings. Consult your network router's user documentation for help with specifying fixed IP address settings.

4.7 The Digital Output Menu

The Digital Output setup menu enables the UnitiQute digital output to be switched on and its signal format configured.

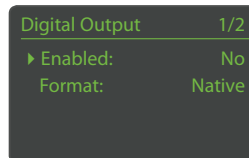


Parameter	Options
Enabled:	Yes / No
Output:	Native / 96kHz 24bit

If **Native** is selected, the digital output format will reflect the input format. If **96kHz 24bit** is selected, the output format is re-clocked to 96kHz. Its resolution will reflect the input up to 24 bit.

4.8 The Front Display Menu

The Front Display setup menu enables the behaviour of the front panel display, logo illumination and logo touch-muting to be modified. The options are tabulated and described in the following section:

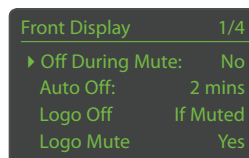

Parameter	Options
Off During Mute:	Yes / No
Auto Off:	Select time from list
Logo Off:	If Muted / If Display Off / Always / Never
Front Panel Mute:	Yes / No


When **Off During Mute** is selected the front panel display will switch off when mute is engaged. **Auto Off** defines the length of time the display will remain switched on after the last interface operation is carried out. Time periods of between 10 seconds and 1 hour can be selected.

Note: If the display has been switched off using the handset **disp** key this setting will take priority over the **Auto Off** setting. The display will always switch on briefly when control commands are received.

The **Logo Off** settings select the circumstances in which the front panel logo illumination will switch off. **Logo Mute** settings engage or disengage the touch-mute function of the front panel logo.

4.9 The Handset Keys Menu


The Handset Keys setup menu enables the UnitiQute inputs assigned to each handset input selection key (Diagram 4.9.4) to be changed, and the function of the handset navigation keys (Diagram 4.9.3) to be configured.

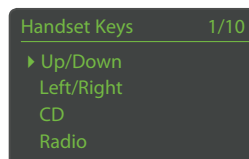

UnifiQute Setup

4.9.1 Navigation Key Functions

Selecting the **Up/Down Actions** parameter from the Handset Keys menu opens a further menu that enables the selection from two modes of handset **up** (▲) and **down** (▼) key function: **Input** and **Off**. If **Input** is selected the keys will select inputs and if **Off** is selected the keys will be disabled.

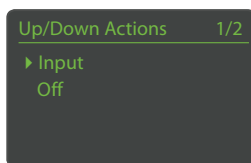

Selecting the **Left/Right Actions** parameter from the Handset Keys menu will open further menus enabling the configuration of the **left** (◀) and **right** (▶) keys independently for the USB/iPod, Radios, and UPnP™ inputs. The options available for the USB/iPod and UPnP™ inputs are **Track**, **List** and **Off**. If **Track** is selected the **left** (◀) and **right** (▶) keys will select the previous or next track. If **List** is selected the keys will return UnifiQute to list mode, and if **Off** is selected the keys will be disabled.




The options available for the Radios input are **Station**, **Preset**, **List**, and **Off**. If **Station** is selected the **left** (◀) and **right** (▶) keys will select the next or previous station. If **Preset** is selected the keys will select the previous or next stored station preset. If **List** is selected the keys will return UnifiQute to list mode, and if **Off** is selected the keys will be disabled.




4.9.2 Input Key Assignments

Each handset input selection key may have up to four inputs assigned to it. The default assignments are shown in the following table:

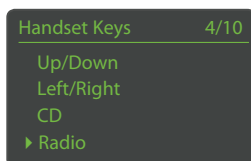

Handset Key	UnifiQute Inputs Assigned
cd:	Analogue
radio:	FM, DAB, iRadio
pc:	UPnP™, USB/iPod
iPod:	USB/iPod, Front
tv:	Digital 1
av:	Digital 2
hdd:	Digital 3
aux:	Digital 4

Beneath the **Up/Down** keys and **Left/Right** keys parameters the **Handset Keys** menu displays a list of the eight handset input keys. Selecting one of the keys then displays a list of the four existing assignments to that key (including unassigned). To change an assignment, select the assignment number to be altered and, from the subsequent menu, select the desired input.

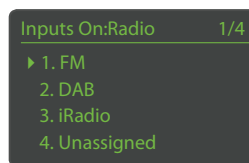

4.9.3 Handset Navigation Keys

The navigation (◀ ▶ ▲ ▼) keys are located around the **ok/list** key.




4.9.4 Handset Input Selection Keys

The input selection keys (**cd**, **radio**, **pc**, **iPod**, **tv**, **av**, **hdd**, **aux**) are located beneath the transport keys (▶▶ ◀◀ ◻ ◀◀ ▶▶).



4.10 The Factory Settings Menu

The Factory Settings setup menu enables UnifiQute's system status information to be displayed, its radio presets to be deleted and it to be returned to its default settings. The options are tabulated and described below:

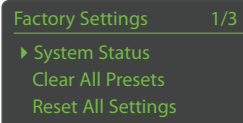

Parameter	Options
System Status:	Select to display
Clear All Presets:	Yes / No
Reset All Settings:	Warning displayed. Confirm or exit.

UnitiQute Integrated Amplifier

5 UnitiQute Integrated Amplifier

UnitiQute incorporates a high performance integrated preamplifier and power amplifier based on established Naim design principles. The preamplifier is able to handle both analogue and digital audio signals and, in addition to UnitiQute's multi-format radio, network interface and USB/iPod interface it has two external analogue and five external digital inputs.

Using the UnitiQute amplifier is simply a matter of selecting the desired input and setting the listening volume level.

5.1 Selecting Inputs

Inputs can be selected by pressing the handset **up** (▲) and **down** (▼) keys or one of the handset **input selection** keys.

Note: The front panel input is automatically selected as soon as a plug is inserted.

Pressing handset **up** (▲) and **down** (▼) keys scrolls through and selects the inputs in the following order:

FM (radio), **DAB** (radio), **iRadio**, **UPnP™** (Network UPnP™), **USB/iPod**, **Front** (front panel analogue/digital), **Analogue**, **Digital 1**, **Digital 2**, **Digital 3**, **Digital 4**.

Note: These are the default input names. They may be altered within the UnitiQute set up menus. See Section 4.3. Inputs can also be disabled so that they are hidden from selection.

Pressing one of the handset **input selection** keys either directly selects a single input or scrolls through a group of inputs. For example, by default, pressing the **CD** input selection key selects the **Analogue** input, while pressing the **radio** input selection key scrolls through a group comprising the **FM**, **DAB** and **iRadio** inputs.

Note: The default input selection key assignments may be altered within the UnitiQute set up menus. See Section 4.9.2.

Selecting an input will route that input's audio signal to the UnitiQute outputs.

UnitiQute will momentarily display input names as they are selected before displaying input specific information; iPod track or radio preset for example.

If an input is not operational (for example, no USB memory stick is attached) when selected, UnitiQute will display a descriptive alert message.

5.2 Volume Control

UnitiQute volume control is achieved by using the handset **vol-** and **vol+** keys. The volume control affects the speaker, headphone and preamplifier outputs.

The mute function silences the UnitiQute speaker, headphone, and preamplifier outputs and is engaged or disengaged by touching the front panel **logo** or pressing

the handset **mute** key. Mute is indicated by the display volume icon flashing.

Note: Logo-touch muting can be disabled. See Section 4.8

5.3 Amplifier Display

In normal operation the UnitiQute front panel display primarily shows information relating to the selected input. It will change temporarily to show amplifier adjustments such as volume level and signal mute state as these are made.

5.4 Signal Outputs

In addition to its speaker outputs the UnitiQute integrated amplifier provides a preamplifier output, a digital output and a headphone output.

The preamplifier output is designed to enable an upgrade or additional power amplifier, or an active subwoofer to be connected. The appropriate output configuration must be selected through the Speakers setup menu. See Section 4.4.

The digital output enables UnitiQute sources to be connected to an external digital to analogue converter or preamplifier with digital inputs. External analogue sources (front Analogue and rear Analogue inputs) are not available via the Digital Output. The digital output signal format can be configured via the Digital Output setup menu. See Section 4.7

Note: Although the UnitiQute FM radio is fundamentally an analogue source, the multi-mode radio module digitises FM signals to make them available via the digital output.

The UnitiQute headphone amplifier is able to drive most commonly available headphones. Insertion of a headphone plug will mute the UnitiQute speaker and preamplifier outputs.

5.5 Amplifier Fault Warnings

In the unlikely event that the UnitiQute power amplifier is overloaded, exceeds its normal operating temperature or malfunctions, its output will mute and the display will show a warning message.


UnitiQute Multi-mode Radio Tuner

6 UnitiQute Multi-mode Radio Tuner

UnitiQute incorporates a multi-mode radio tuner able to receive FM and DAB transmissions and internet radio streams. FM and DAB operation requires an appropriate aerial to be connected to the rear panel aerial input. Internet radio requires UnitiQute to be connected to a broadband internet service via a network router that incorporates an appropriate firewall. UnitiQute is able to store a total of forty station presets (favourites) across all three tuner modes. Select the FM, DAB or iRadio input to begin.

6.1 FM Tuner – Seeking Stations

To find FM stations press the handset **prev** (◀) or **next** (▶) keys and the tuner will scan the FM band locking on to and stopping at stations that exceed a specific signal strength.

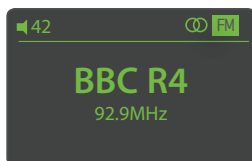

Note: The interlocked circle icon at the top right of the display indicates a stereo signal.

Note: The signal strength lock threshold may be altered within the UnitiQute set up menus. See Section 4.3.1.

If stations are RDS enabled their names, rather than just their frequencies, will be displayed. Pressing the handset **info** (i) key will sequentially display any station info broadcast, station genres if defined and station frequency. If stations are not RDS enabled, the info key will display only the station frequency.

When the scan stops at a station either press the **prev** (◀) or **next** (▶) key again to ignore the station and continue the scan or store the station as a preset favourite by pressing the handset **store** key.

Pressing the handset **ok/list** key displays an FM options menu that enables mono mode to be selected. Mono operation can sometimes be useful to reduce noise and interference.

6.2 DAB Tuner – Seeking Stations

When the UnitiQute DAB Radio input is first selected it must scan for stations. Select the DAB input and press the handset **ok/list** key to begin the search. Scan progress and the number of stations found will be displayed. When the scan is complete UnitiQute will order the stations alphabetically and select the first station in the list.



DAB stations can be selected either alphabetically in turn by pressing the handset **prev** (◀) or **next** (▶) keys, or selected in **list** mode by pressing the **ok/list** key and browsing the station list. Use the handset **up** (▲) or **down** (▼) keys to scroll through the list and the **ok/list** key to select a station. In long lists the

handset **numeric/text** keys can be used to jump through the list alphabetically.

Once a station is selected, pressing the handset **info** (i) key will sequentially display the station genre, signal strength, bit rate and any station info broadcast.

6.3 iRadio Tuner – Seeking Stations

When UnitiQute is connected to a network with high speed internet access it will automatically download a list of available internet radio stations. When the iRadio input is subsequently selected, a **list**




mode menu will be displayed that shows all the available stations sorted by location, genre, podcast location, podcast genre, new station and most popular stations. The display will automatically enter **list mode** so the handset **up** (▲), **down** (▼), **left** (◀) and **ok/list** keys can be used to browse the menus and select stations. In long lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

Once a station is selected the UnitiQute display will exit from **list mode** and revert to normal mode. To re-enter list mode for further list browsing and selecting press the handset **ok/list** key.

Pressing the handset **info** (i) key while a station is playing will sequentially display the station (stream) name, elapsed time, stream info, buffer level and any station info broadcast.

Note: Buffer level indicates the quantity of stored data within UnitiQute and reflects the ability of the network to provide data at the necessary rate.

It is possible for an internet radio station listed to be "off-line" and be unavailable when selected. If this occurs an alert message will be displayed.

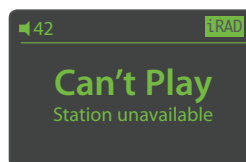

Note: If UnitiQute is left muted for more than five minutes while an internet radio station is selected the data stream will be stopped in order to save network bandwidth. The stream will re-start as soon as mute is disengaged.

UnitiQute Multi-mode Radio Tuner

6.4 Adding iRadio Stations

The Naim Radio Guide web site enables iRadio stations not included in the standard UnitiQute list to be added for download to your UnitiQute. To access the web site and add stations follow the steps below.


- With a computer connected to the same network as the UnitiQute, browse to <http://naim.vtuner.com>
- Enter the identification (ID) of your UnitiQute where requested on the web page. The ID is the unit's MAC address. This can be found via the following UnitiQute menus: **Setup > Factory Settings > System Status > MAC**.

Note: You can register a username and password so that the MAC address is not required on any subsequent visit.


- To add stations follow the **My Added Stations** link and provide the information required. Click on the **arrow** to complete the procedure.
- The added station will then be visible on the Naim Radio Guide home page.
- To access the stations from the UnitiQute, select the iRadio input then select **Added Stations**.

6.5 Storing Radio Presets

When the handset **store** key is pressed the display will show a menu that enables confirmation of the preset store and options to rename or delete a stored preset.

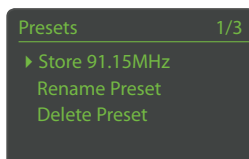


Selecting the **store** option opens a menu that enables the preset to be stored in one of the forty locations. Scroll to the desired location and press the **ok/list** key.

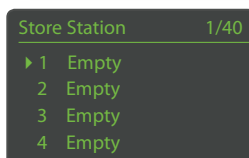

Selecting **Rename Preset**

opens a menu that provides the opportunity to rename a previously stored station. Scroll to the preset to be renamed and press the **ok/list** key to open a text entry screen. Use the handset **numeric/text** keys in text entry mode to select characters. Press the **ok/list** key to save the new preset name. See Section 3.6 for a full description of text entry.

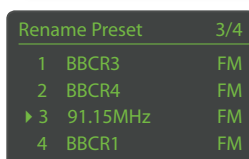

Selecting **Delete Preset** opens a preset list menu. Scroll to the desired preset and press the **ok/list** key.

Note: Preset operations (store, rename or delete) are not possible directly from list mode. The store key must be pressed when in normal play mode to access these options.

6.6 Using Radio Presets

To select a preset press the handset **preset** key to open the **Browse Presets** menu. Scroll to the desired preset and press the **ok/list** key.



Note: The Browse Presets menu displays presets stored across all three UnitiQute radio modes (FM, DAB, iRadio). Selecting a preset from a radio mode other than the one currently selected will automatically switch UnitiQute to that mode.

Note: It is possible for an internet radio station stored as a preset to be "off-line" and be unavailable when subsequently selected. If this occurs an alert message will be displayed.

Note: Pressing the preset key will display the preset list regardless of the currently selected input.

UnitiQute UPnP™ Audio Interface

7 UnitiQute UPnP™ Audio Interface

In addition to providing the network connection required for internet radio playback, the UnitiQute network interface enables audio files stored on UPnP™ servers to be streamed and played. UnitiQute must be connected, either wirelessly or via ethernet cabling, to a network router. If the router provides an internet connection it should incorporate a firewall. If UnitiQute is already connected to a network, begin by selecting the UPnP™ input.

7.1 UPnP™ Servers

UPnP™ servers incorporate a software application that allows UnitiQute, or any other UPnP™ compatible player, to play audio stored and streamed by another device on the network. The UPnP™ server is usually a PC or Mac home computer, although some Network Attached Storage (NAS) drives incorporate a UPnP™ application.

Windows Media™ Player version 11 or above incorporates built in UPnP™ support and a variety of third party UPnP™ applications are also available that are compatible with both Windows and Macintosh operating systems.

In the case of the Windows UPnP™ server the following steps must be taken before music can be streamed to UnitiQute:

- Ensure Windows Media™ Player version 11 or above is installed.
- Enable Windows Media™ Player file sharing. From the Media Player Options dialogue select **Library > Configure Sharing...** then select **Share my media**.
- Ensure the firewall is configured to allow file sharing.



7.2 Audio File Compatibility

The audio files stored on the UPnP™ servers attached to the network may be in MP3, AAC, FLAC, WMA, WAV or Ogg Vorbis formats. Files must be free of any digital rights management playback restrictions such as the Apple iTunes FairPlay system.


7.3 Scanning Servers and Playing Files

When the UnitiQute UPnP™ input is selected a list of available UPnP™ servers on the network will be displayed. The display will automatically enter **list mode** so the handset **up** (▲), **down** (▼) and **ok/list** keys can be used to browse and select the desired server.

Note: Allegro Media Server (shown in the illustrations) is a UPnP™ Media Server application that runs on Apple or Windows PCs and provides access to media files and iTunes library contents from UPnP™ media players such as UnitiQute.

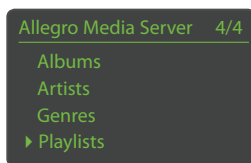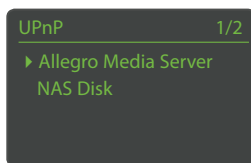

The manner in which the UPnP™ server is set up will define how the audio files and playlists it holds are listed and displayed. In most cases the default setup will list and display files by artist and album, but list by genre and predefined playlists may also be available.

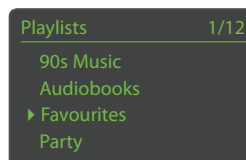

Note: Playlists cannot be generated or stored locally by UnitiQute. To play a playlist it must reside on the UPnP™ server.

Selecting one of the playlist categories using the **up** (▲), **down** (▼) and **ok/list** keys will display a menu showing items that fall into the selected category. An entire category can be selected for playback by using the **up** (▲), **down** (▼) keys followed by the **play/pause** (▶||) key.



Alternatively, selecting a category using the **up** (▲), **down** (▼) keys followed by the **ok/list** key will display the full list of tracks contained within the category. Tracks can then be selected for playback by using the **up** (▲), **down** (▼) and **ok/list** keys.

In long lists the handset **numeric/text** keys can be used to jump through the list alphabetically.

Once playback is underway the UnitiQute display will exit from **list mode** and revert to normal mode where the handset transport keys (▶|| ◀◀ ▶▶ ■) can be used to control playback. To re-enter list mode for further list browsing and selecting press the handset **ok/list** key.

During playback, pressing the handset **info** (i) key will sequentially display the server name, buffer level, track elapsed time and stream (audio file) information.

Note: Buffer level indicates the quantity of stored data within UnitiQute and reflects the ability of the network to provide data at the necessary rate.

UnitiQute USB/iPod Interface

8 UnitiQute USB/iPod Interface

UnitiQute can play audio files stored on USB memory sticks and 5th generation or later Apple iPod and iPod touch models connected to the front panel USB socket. Begin by inserting a memory stick or connecting an iPod to the USB socket and selecting USB/iPod input.

8.1 USB Media and File Compatibility

USB memory sticks must be in Windows/DOS format (FAT/FAT32) to be used with UnitiQute. Macintosh formats are not compatible.

UnitiQute can play audio files stored on USB Sticks in the following formats: MP3, AAC, FLAC, WAV, WMA and Ogg Vorbis. Files must be free of digital rights management playback restrictions such as the Apple iTunes FairPlay system.

8.2 iPod Compatibility and Charging

The UnitiQute USB audio interface is compatible with 5th generation iPod models and all iPod touch models.

UnitiQute can play iPod audio files in the following formats: MP3, AAC, FLAC, WAV, WMA, Apple Lossless and Ogg Vorbis. Files must be free of digital rights management playback restrictions such as the Apple iTunes FairPlay system.

The iPod battery will be charged by default while the iPod is connected and an alternative UnitiQute input is selected. iPod charging options can be changed in the USB/iPod input setup menu. See Section 4.3.5.

8.3 Browsing and Playing USB Files

With a USB memory stick inserted or an iPod connected and the UnitiQute USB/iPod input selected, the display will enter **list mode** and show the structure of stored audio files. Use the handset **up** (▲), **down** (▼), **left** (◀) and **ok/list** key to browse and select items.



Note: The memory stick or iPod can be safely connected or disconnected at any time.

Selecting a folder will display the list of files contained within and selecting a single file will begin playback. Playback will continue through any list of files contained within a folder. The order of play can be shuffled (randomised) by pressing the handset **shuffle** (⌘) key.

In long lists of items the handset **numeric/text** keys can be used to jump through the list alphabetically.

Once playback is underway the UnitiQute display will exit from **list mode** and revert to normal mode where the handset transport keys (▶▶ ◀◀ ▶ ■ ◀◀ ▶▶) can be used to control playback. To re-enter list mode for further list browsing and selection, press the handset **ok/list** key.

During playback, pressing the handset **info** (i) key will alternately display data stream info and track elapsed time.

UnitiQute Specifications

9 UnitiQute Specifications

Audio Outputs:	Speaker output Preamp output (L+R RCA)
Preamp Output:	775mV, 22Ω
Preamp Output Load:	10kΩ minimum
Frequency Response:	20Hz - 50 kHz
Signal to Noise Ratio:	80dB
Phase Response:	Linear phase, absolute phase correct
Power Output:	30WPC into 8Ω 45WPC into 4Ω
Other Outputs:	Headphone, 3.5mm jack Digital S/PDIF, BNC 75Ω (plus RCA phono adaptor)
Radio Antenna Input:	F type (plus PAL adaptor)
Analogue Inputs:	3.5mm front panel jack 1 x RCA pair
Digital Inputs:	5 x S/PDIF (2 x optical TosLink, 2 x coaxial, 1 x 3.5mm miniTosLink)
Analogue Input Overload:	33.8dB (Front panel input) 27dB (RCA input)
USB:	Front panel socket
Other Inputs:	Ethernet
IR Input:	Front panel
RS232:	Rear panel
Mute Control:	Front panel touch-logo
Audio Formats Supported:	Internet radio (WMA, MP3 Streams, MMS) Playlists (M3U, PLS) MP3, AAC (up to 320 kbps, CBR/VBR) Apple Lossless (from iPod) Windows Media-formatted content (up to 320 kbps) WAV, FLAC, Ogg Vorbis
Supply Voltage:	100V, 115V or 230V, 50/60Hz
Quiescent Consumption:	25 Watts
Dimensions (H x W x D):	87 x 207 x 314mm
Weight:	5.6kg
Shipping Weight:	7.1kg
Shipping Dimensions: (H x W x D)	240 x 370 x 500mm
Finish:	Black